



DV530002

Magnetic aluminium keyboard - CZ


User Manual

Magnetic suction installation


Easy and effortless installation



Connectivity

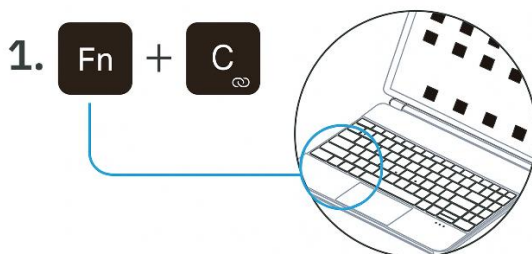

Turn on the keyboard power, and then press the Fn+C keys on the keyboard. The keyboard will be in a waiting search state for three minutes.

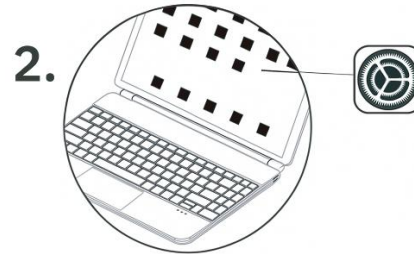

Open the settings for your iPad.




Turn on Bluetooth in your iPad and leave Bluetooth in 'ON' search mode.



Search for the keyboard wireless signal "Dviced Keyboard" on other devices on the iPad machine, click on "Connect", and the wireless signal light remains constantly on.


Note: Starting from the second time, Bluetooth will automatically connect when turned on.

Charging and maintenance

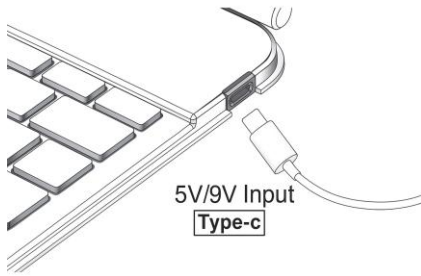

Switch button

Switch button
Move up and down
to turn on/off

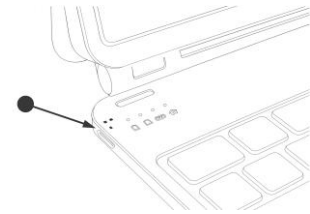

Maintain it at room temperature and charge it normally for a long time.

No, you need to charge the keyboard in a timely manner (once every 2 months).


Special instructions for indicator lights

Blue light: Flashing when wireless pairing is in progress; The blue light remains on when pairing is successful.

Blue light: When in capital letters, the light remains on, and when in lowercase letters, the light goes off.

Blue light: Low battery flashing, red light frequently on during charging. If fully charged, the red light will not light up.



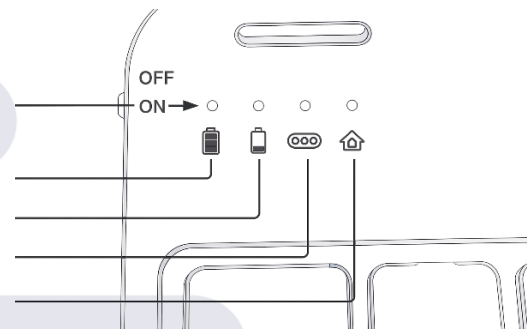











Pilot lamp
Power light
Charging lamp
Bluetooth connectivity
Caps Lock







Hotkey function




Function shortcut keys fn+

| | | | |
|---|------------------|---|----------------------|
|  | Home key |  | Pause/Play |
|  | Search |  | Next song |
|  | Virtual keyboard |  | Volume reduction |
|  | Screenshot |  | Volume increase |
|  | Copy |  | Brightness reduction |
|  | Past |  | Brightness increase |
|  | Previous song |  | Lock screen |

Special instructions for some function buttons





01.  +  Turn on/off touch function  +  Open Virtual keyboard

02. After turning on the device, press the backlight button for 180 seconds and it will automatically turn off without any operation. To turn it on, press the 


Dimming the light  +  Add lighting  + 

Press twice  Turn on the running light.

 +  Switch seven color backlight key.


03.  +  Page down  +  Page up


04. Switch input language  + 

05.  + Other buttons can produce some uncommon special characters.

06. Select All  +  Copy  + 

Paste  +  Shear  + 

07.  (Case switching) After connecting to the iPad, open the settings on the iPad — General — Keyboard — Physical keyboard — Close Use the Caps Lock key to switch languages.

08.  Click twice in a row to open voice input.

Product characteristic

- Can achieve wireless connection, more convenient operation without password.
- Ultra lightweight design concept, easy to carry.
- The keyboard has an energy-saving sleep function.
- Equipped with touchpad function, making operation and use more convenient.
- Power indicator function.

Product parameters

1. Operating distance: 10 meters
2. Modulation system: GFSK
3. Working voltage: 3.3 - 4.2V
4. Charging current: < 250 mA
5. Standby time: 90 days
6. Lithium battery capacity: 500 mAh
7. Continuous working hours:
 - with backlight < 5/h,
 - typing without touch < 220/h,
 - typing with touch < 90/h.
8. Charging time: < 3 hours
9. Charging temperature: 0 - 45°C

The content of this manual and the specifications of this product are subject to change without prior notice.

 Attention: To operate this product correctly, please read the user manual carefully.

Made in China.